

Daily use and maintenance
instructions for mechanical keyboards

Structurally speaking, the mechanical keyboard is just a switch under each button. Its fears dust, beverages, oil and water from the structure itself. In daily use, you should keep these substances from falling into the keyboard which may cause key failure or make damage to the circuit board.

1. Precautions for dust: Avoid soot or other dust falling into the keyboard. If soot or other dust enters, the best way to deal with it is to remove the keycap, then clean it up by sucking while brushing with a vacuum cleaner and a brush. Never flip and tap the keyboard without removing the keycap, which will cause more dust to enter the shaft and damage the shaft.
2. Ways to use the keyboard cleaning mud: Do not press the entire cleaning mud directly onto the keyboard. The correct way to use it is to clean the dust on the surface of the keycap with a slight pressure, then pull out the keycap and take a small piece of cleaning mud and knead it into a small ball. Roll it in the gap of the shaft body to clean the dust.
3. Precautions for keyboard liquid input: If any kind of fluid falls into the keyboard, please power off the keyboard quickly. At the same time, make a hand-made drying box with a hair dryer and a large carton, then put the whole keyboard into the box for fast drying for about 2 hours (avoid blowing the hair dryer directly to the keyboard at close range, otherwise the keyboard shell will be deformed due to high temperature) When fluid other than clean water invades, if there is a problem with the shaft after drying, please contact the after-sales service as soon as possible.

Note: The final interpretation right of this product belongs to HELLO GANSS brand



2.4G · Bluetooth

Multimedia Func Keys		Win	Mac		Win	Mac
	FN+F1	Computer	☼	FN+F7	Play/Pause	⏮
	FN+F2	Browser	☼	FN+F8	Stop	⏮
	FN+F3	Email	✉	FN+F9	Volume+	➡
	FN+F4	Player	🔊	FN+F10	Volume-	⏮
	FN+F5	Previous	⏮	FN+F11	Mute	🔊
	FN+F6	Next	⏭	FN+F12	Calculator	🔊

Basic Func Keys	FN+Caps	Switch the position of caps and left Ctrl
	FN+Win_L	Lock/Unlock WIN key
	FN+A	Windows system support(Default)
	FN+S	MAC system support
	FN+Tab	Open and block the macro function in the driver
	FN+N	Hold down for 3s-power saving function off/on (default on) Note: Turn off sleep mode will shorten battery life
	FN+space	Hold down for 5s - Reset to factory settings

Note: when using different combination keys, indicating lights will have different frequency flashing hints.

🔌	Toggle the switch here - wired mode
G	Toggle the switch here - 2.4G mode
B	Toggle the switch here - Bluetooth mode

Bluetooth Func Keys	FN+Q	Switch to Bluetooth device 1
	FN+W	Switch to Bluetooth device 2
	FN+E	Switch to Bluetooth device 3
	FN+R	Switch to Bluetooth device 4
	FN+T	Switch to Bluetooth device 5
	FN+P	Hold down for 3s -Bluetooth pairing

Instructions of Bluetooth Paring:
If you want to save the current Bluetooth device to be matched to key Q (Bluetooth device 1), first confirm that the keyboard is in Bluetooth mode, press and hold the FN key, then press the Q key to switch to Bluetooth device 1 (the indicator flashes briefly), and then press and hold the FN key and P key for Bluetooth code matching (the indicator flashes continuously), Then operate the Bluetooth function of the current device (or tablet and other devices) to find the Bluetooth keyboard and click to pair. Next, please wait patiently. This process takes several seconds (the length of time is related to the performance of the device). After successful pairing, the flashing indicator light will go out automatically, and the keyboard can be used normally.

Repeat the above operation to save up to 5 Bluetooth device information, and switch with FN + Q / W / E / R / T.

Backlights Func Keys	FN+1!	Backlights on	Please confirm that your product has backlight function, the backlight of a product with wireless function can only be turned on in wired mode.
	FN+2@	Breathing effect	
	FN+3#	Backlights off	
	FN+ ↓	Backlights weaken	
	FN+ ↑	Backlights brighten	
	FN+←	Backlights slower	
	FN+→	Backlights faster	

Reminder (If your keyboard has wireless function)

When the battery voltage is too low, the indicator will flash slowly to remind, please replace the battery in time.

In the wireless mode, if the keyboard does not operate within a certain period of time, it will automatically enter the sleep state to save power (the specific duration depends on the actual situation of the product). You can wake up the product by tapping any key. You can aslo turn off the keyboard sleep function with FN + N.

Welcome to the official website to check whether your product has the corresponding driver, so that you can use the product more conveniently.