

## Daily use and maintenance instructions for mechanical keyboards

Structurally speaking, the mechanical keyboard is just a switch under each button. Its fears dust, beverages, oil and water from the structure itself. In daily use, you should keep these substances from falling into the keyboard which may cause key failure or make damage to the circuit board.

1. Precautions for dust: Avoid soot or other dust falling into the keyboard. If soot or other dust enters, the best way to deal with it is to remove the keycap, then clean it up by sucking while brushing with a vacuum cleaner and a brush. Never flip and tap the keyboard without removing the keycap, which will cause more dust to enter the shaft and damage the shaft.

2. Ways to use the keyboard cleaning mud: Do not press the entire cleaning mud directly onto the keyboard. The correct way to use it is to clean the dust on the surface of the keycap with a slight pressure, then pull out the keycap and take a small piece of cleaning mud and knead it into a small ball. Roll it in the gap of the shaft body to clean the dust.


3. Precautions for keyboard liquid input: If any kind of fluid falls into the keyboard, please power off the keyboard quickly. At the same time, make a hand-made drying box with a hair dryer and a large carton, then put the whole keyboard into the box for fast drying for about 2 hours (avoid blowing the hair dryer directly to the keyboard at close range, otherwise the keyboard shell will be deformed due to high temperature) When fluid other than clean water invades, if there is a problem with the shaft after drying, please contact the after-sales service as soon as possible.

Note: The final interpretation right of this product belongs to HELLO GANSS brand

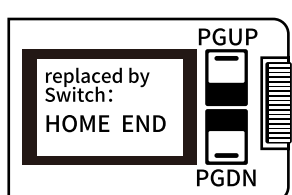


**XS98T-LI**  
2.4G · Bluetooth · RGB

|                        |                                                                                   |                                                                      |
|------------------------|-----------------------------------------------------------------------------------|----------------------------------------------------------------------|
| <b>Indicator light</b> | <ul style="list-style-type: none"> <li>• From top</li> <li>• to bottom</li> </ul> | Num Lock<br>Caps Lock<br>Scroll Lock<br>Win Lock/Low battery warning |
|------------------------|-----------------------------------------------------------------------------------|----------------------------------------------------------------------|

|                                                     |                                                                                                      |                                                                                    |
|-----------------------------------------------------|------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------|
| <b>Mode Switch</b><br>the left side of the keyboard | <br>BT Wired 2.4G | 2.4G Mode, Turn switch to 2.4G mode, plug the 2.4G dongle into the computer to use |
|                                                     |                                                                                                      | BT Mode, According to the description of the Bluetooth section of the manual       |

|                             |       |          |     |        |            |     |
|-----------------------------|-------|----------|-----|--------|------------|-----|
| <b>Multimedia Func Keys</b> |       | Win      | Mac |        | Win        | Mac |
|                             | FN+F1 | Computer | ⌘   | FN+F7  | Play/Pause | ⏪   |
|                             | FN+F2 | Browser  | ☀   | FN+F8  | Stop       | ⏩   |
|                             | FN+F3 | Email    | ✉   | FN+F9  | Volume+    | ▶▶  |
|                             | FN+F4 | Player   | 🎵   | FN+F10 | Volume-    | ◀   |
|                             | FN+F5 | Previous | ⏮   | FN+F11 | Mute       | 🔇   |
|                             | FN+F6 | Next     | ⏭   | FN+F12 | Calculator | 🧮   |

|                        |                                                   |                                                                                                                                                                                                                  |                                                                                     |  |  |                                          |
|------------------------|---------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|--|--|------------------------------------------|
| <b>Basic Func Keys</b> | FN+Caps                                           | Hold down for 3s-Switch the position of caps and left Ctrl                                                                                                                                                       |                                                                                     |  |  |                                          |
|                        | FN+Win                                            | Lock/Unlock WIN key                                                                                                                                                                                              |                                                                                     |  |  |                                          |
|                        | FN+A                                              | Hold down for 3s-Windows system support(Default)                                                                                                                                                                 |                                                                                     |  |  |                                          |
|                        | FN+S                                              | Hold down for 3s-MAC system support                                                                                                                                                                              |                                                                                     |  |  |                                          |
|                        | FN+Tab                                            | On/off the macro functions in the driver                                                                                                                                                                         |                                                                                     |  |  |                                          |
|                        | Del<br>FN+Pgup<br>Pgdn                            | Ins<br>= Home<br>End                                                                                                                                                                                             |  |  |  | Up-Volume+<br>Press-Mute<br>Down-Volume- |
|                        | FN+N                                              | Hold down for 3s-Super power-saving mode<br>In this mode, all power-consuming functions (backlight, screen, etc.) will be turned off and performance will be limited.<br>If affects the use, please turn it off. |                                                                                     |  |  |                                          |
| FN+Space               | Hold down for a while - Reset to factory settings |                                                                                                                                                                                                                  |                                                                                     |  |  |                                          |

Note: when using different combination keys, indicating lights will have different frequency flashing hints.

|                         |                                                                 |                                                                                                                                                                                                   |  |  |  |
|-------------------------|-----------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|--|--|
| <b>Screen Func Keys</b> | FN+ESC                                                          | Screen power On/Off                                                                                                                                                                               |  |  |  |
|                         | FN+,<                                                           | The selection on screen moves to the left                                                                                                                                                         |  |  |  |
|                         | FN+,>                                                           | The selection on screen moves to the right                                                                                                                                                        |  |  |  |
|                         | FN+Shift                                                        | SHIFT(right)--Selection confirm (the gif playback Exit )                                                                                                                                          |  |  |  |
|                         | FN+M                                                            | Hold down for 3s-APM Mode/Clock Mode<br>Press Once-APM count return to zero<br><br>APM mode:the keyboard will record number of Clicks from the first click,And it keeps recording for one minute. |  |  |  |
|                         | <b>Note:Screen Settings adjustment requires driver software</b> |                                                                                                                                                                                                   |  |  |  |

|                            |      |                                     |      |                    |
|----------------------------|------|-------------------------------------|------|--------------------|
| <b>Bluetooth Func Keys</b> | FN+Q | Switch to device 1                  | FN+W | Switch to device 2 |
|                            | FN+E | Switch to device 3                  | FN+R | Switch to device 4 |
|                            | FN+T | Switch to device 5                  |      |                    |
|                            | FN+P | Hold down for 3s -Bluetooth pairing |      |                    |

Instructions of Bluetooth Paring:

If you want to save the current Bluetooth device to be matched to key Q (Bluetooth device 1),first confirm that the keyboard is in Bluetooth mode,press and hold the FN key,then press the Q key to switch to Bluetooth device 1(the indicator flashes briefly),and then press and hold the FN key and P key for Bluetooth code matching (the indicator flashes continuously),Then operate the Bluetooth function of the current device(or tablet and other devices)to find the Bluetooth keyboard and click to pair.Next,please wait patiently.This process takes several seconds (the length of time is related to the performance of the device).

After successful pairing,the flashing indicator light will go out automatically,and the keyboard can be used normally.

Repeat the above operation to save up to 5 Bluetooth device information,and switch with FN+Q/W/E/R/T.

|                             |           |                                                                                 |                                                                                   |
|-----------------------------|-----------|---------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
| <b>Backlights Func Keys</b> | FN+ (1-7) | Multiple backlight modes<br>You can use FN + 7 to change the color of RGB light | FN+~`<br>Note: ~ key is located below the ESC key                                 |
|                             | FN+ (8-0) | 3 Custom mode (depends on the model)                                            |                                                                                   |
|                             | FN+ ↓     | Backlights weaken                                                               | The Keyboard back decorative light mode switch (streamer/spectrum/monochrome/off) |
|                             | FN+ ↑     | Backlights brighten                                                             |                                                                                   |
|                             | FN+←      | Backlights slower                                                               |                                                                                   |
|                             | FN+→      | Backlights faster                                                               |                                                                                   |

How to use custom mode:

If you want to set the custom lighting effect of 8 keys, long press FN + 8 for 3 seconds to enter the lighting recording mode. After setting, long press FN + 8 again for 3 seconds, the indicator will stop flashing, and the lighting recording is over. Next time, you can directly use FN + 8 to call up the previously set custom lighting effect.

### Reminder(If your keyboard has wireless function)

**Lithium battery products:**

Press and hold FN key,the red light of the numeric-keys (from 1 to 0) shows the battery power,release the FN key to restore.

When Charging, press down FN key, the green light of the numeric-keys (from 1 to 0) shows the battery power.

Please check the battery level in wireless mode.

The keyboard will automatically turn off the backlight to maintain the basic functions when the battery power is low

In the wireless mode, if the keyboard does not operate within a certain period of time, it will automatically enter the sleep state to save power (the specific duration depends on the actual situation of the product). You can wake up the product by tapping any key.

Welcome to the official website to check whether your product has the corresponding driver, so that you can use the product more conveniently.

THE END